



Black and Decker PS1800 Chuck Replacement

This guide will show you how to replace the Black and Decker PS1800's Chuck.

Written By: David Nawl



INTRODUCTION

This guide will show you how to replace the Black and Decker PS1800's Chuck.



TOOLS:

- [Allen Wrench](#) (1)
 - [T20 Torx Screwdriver](#) (1)
-

Step 1 — Chuck



- Take out the 2.3 mm Torx Security screw inside the chuck. Using a Torx Security 20 screw driver.

Step 2



- Set the drill to drill mode and tight the chuck with a Allen wrench in it.
- Use the wrench to unscrew the chuck. By rotating it to the left.

Step 3



- Remove the chuck by unscrewing it to the left.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 08:02:30 AM.